



Clamp replacement

 This operation must take place when the product is disconnected from the electrical system.


No.	Référence	Qté
1	90975	1
2	90977	2
3	90978	2
4	55179	2
5	55161	2
6	71125	2
7	55178	2
8	71715	2
9	55227	2
10	56278	2

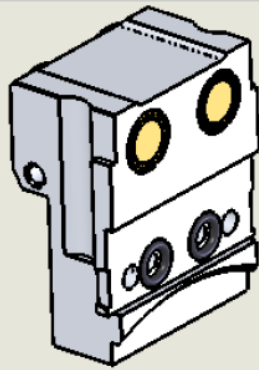


- Remove the two screws.

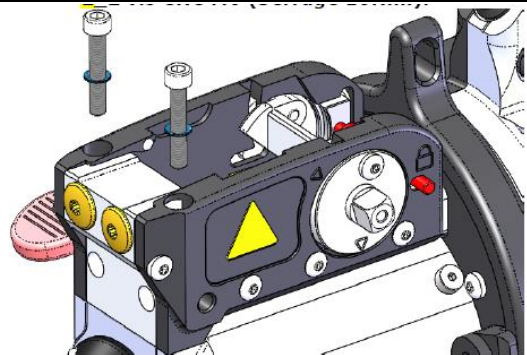

- Remove the five screws.

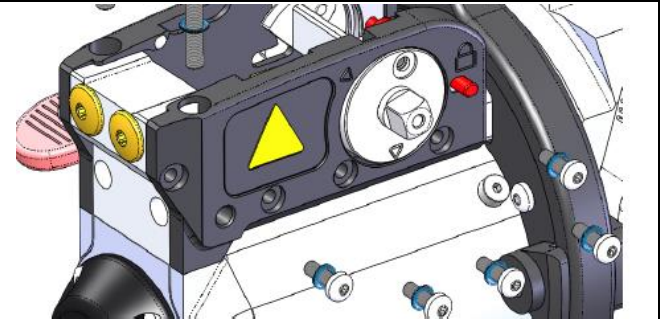


- Shifting the flank.

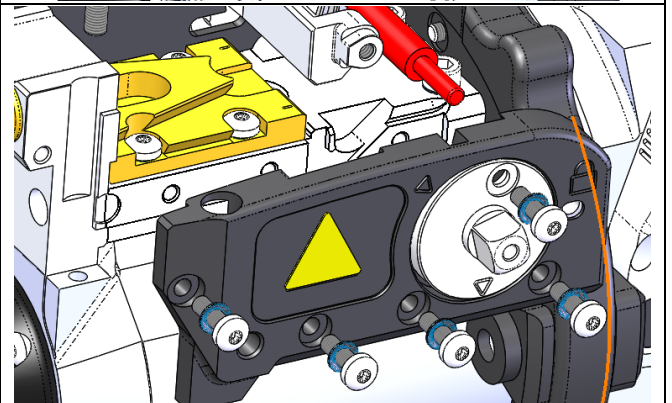


Clamp replacement


- Remove the screws.

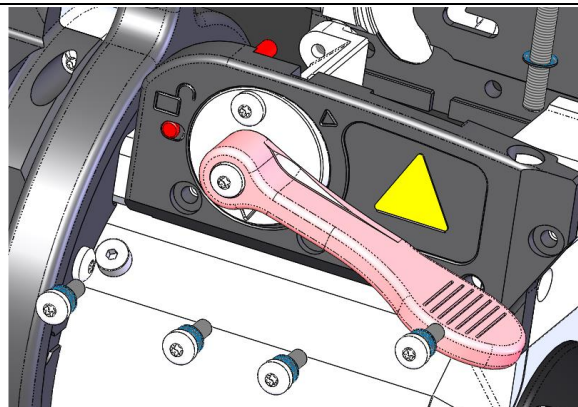

- Shifting the flank.

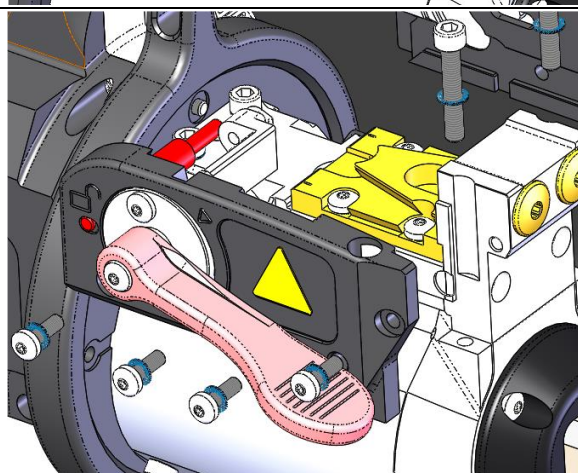


- Unscrew the 2 CHC screws (Tightening 10N.m) and the shoulder screw (Tightening 4N.m)

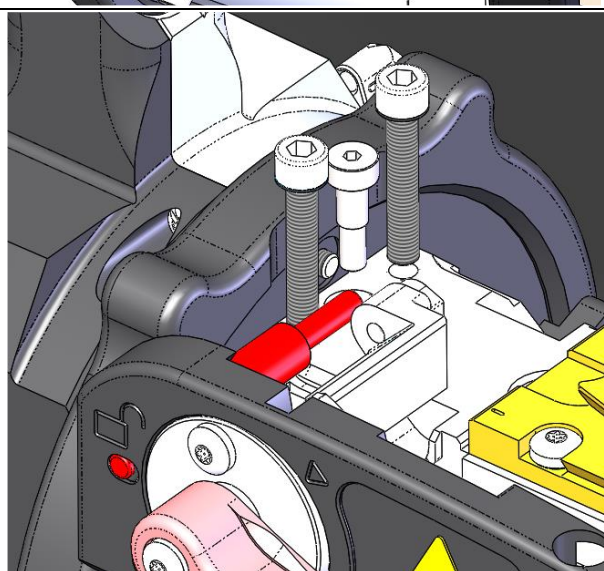


Clamp replacement


- Unscrew the 2 screws (Tightening 4N.m)

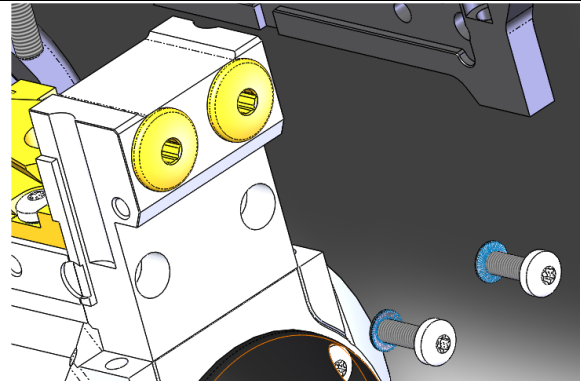

- Lift and pull the front body.

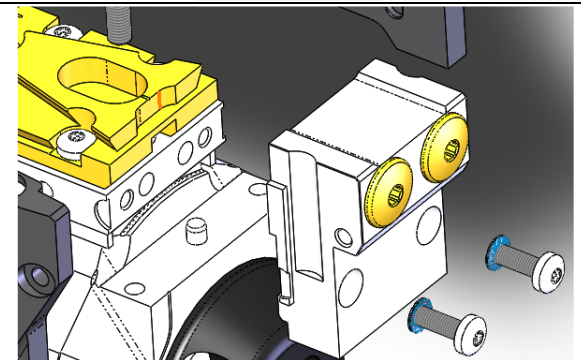

- Replace the O-rings before reinstallation.

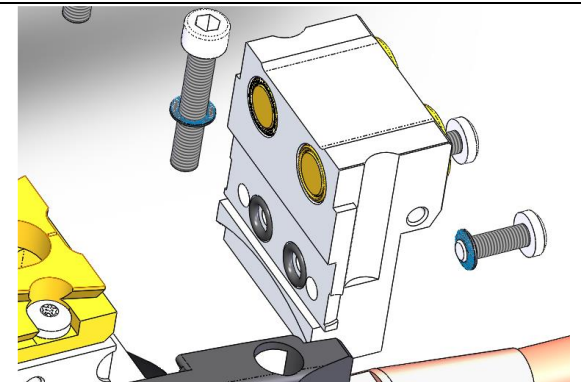

- Follow the disassembly steps in reverse order to reassemble the new clamp
- Once the clamp is fully reassembled, the product is ready to use.