




Notice de montage

Assembly manual

Montageanleitungen

CHARIOT / TROLLEY / WAGEN
DENT 1600 WD

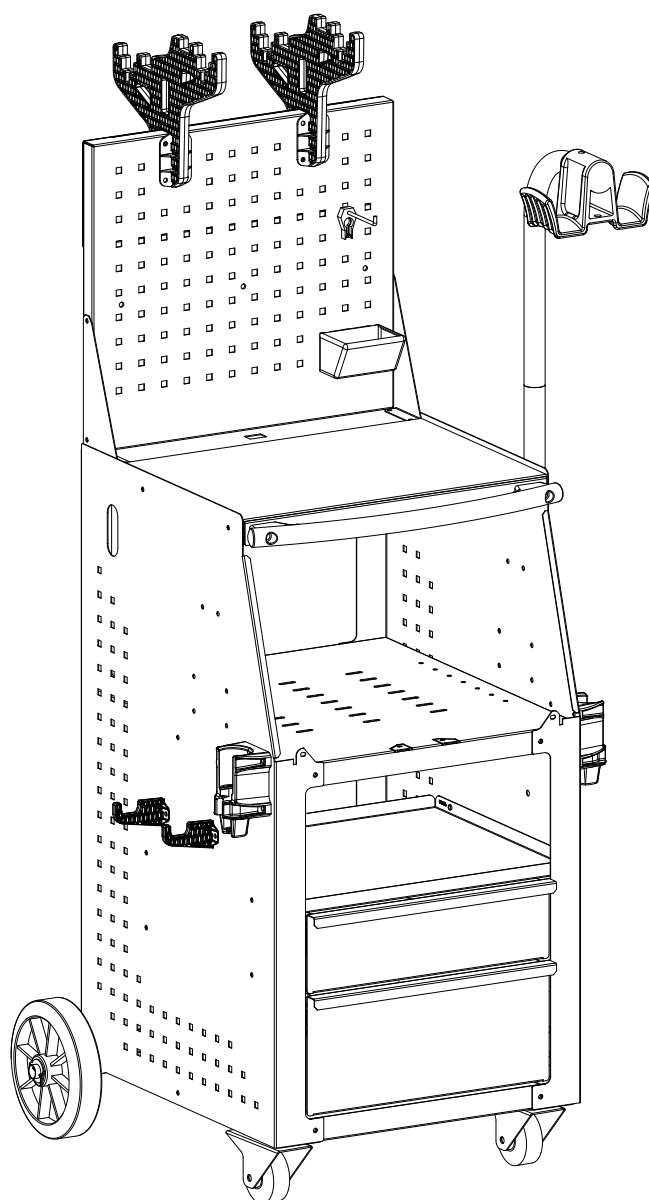


VIDEO



▶ Quick Setup

DENT 1600 WD


Tableau récapitulatif / Summary table / Zusammenfassende Tabelle

	Dimensions	Name	Quantity	Reference
	M6 x 12	A	x 54	43356
	M6 x 20	B	x 14	41026
	M8 x 12	C	x 12	41281
	M8 x 40	D	x 2	42066
	M6	E	x 16	41151
	M8	F	x 14	41157
	-	G	x 2	42032
	20 x 35 x 1.5	H	x 2	41214
	D4.2 x 9.5	I	x 1	41086
	M6 x 10	J	x 2	41288
	M5 x 10	K	x 4	41025
	D4.8 x 16	L	x 4	42096


Outils / Tools / Werkzeug

 	
M6 (6 Nm max) TORX 30	M10 (30 Nm max)

1 | 22 A

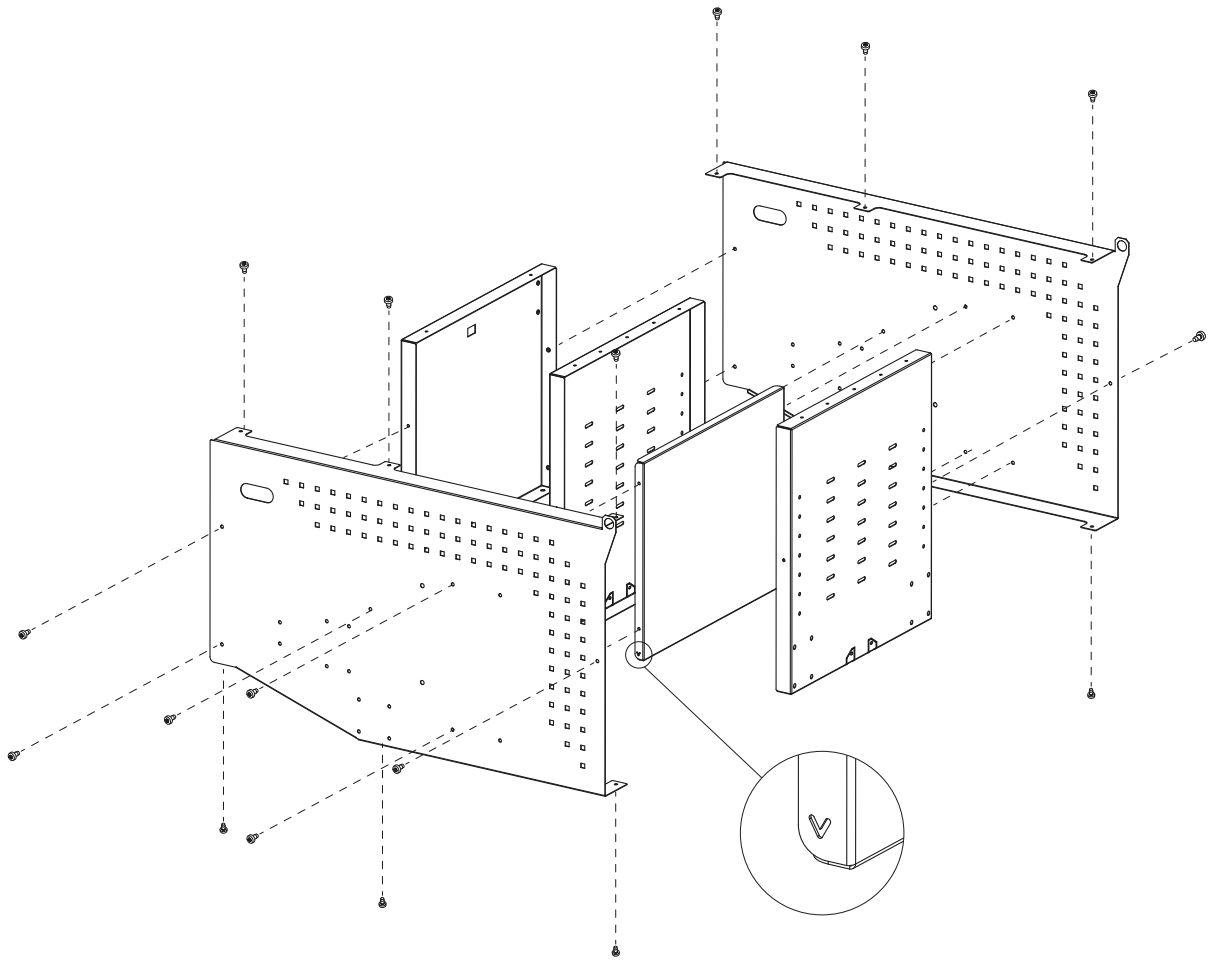


2 | 12 C + 12 F

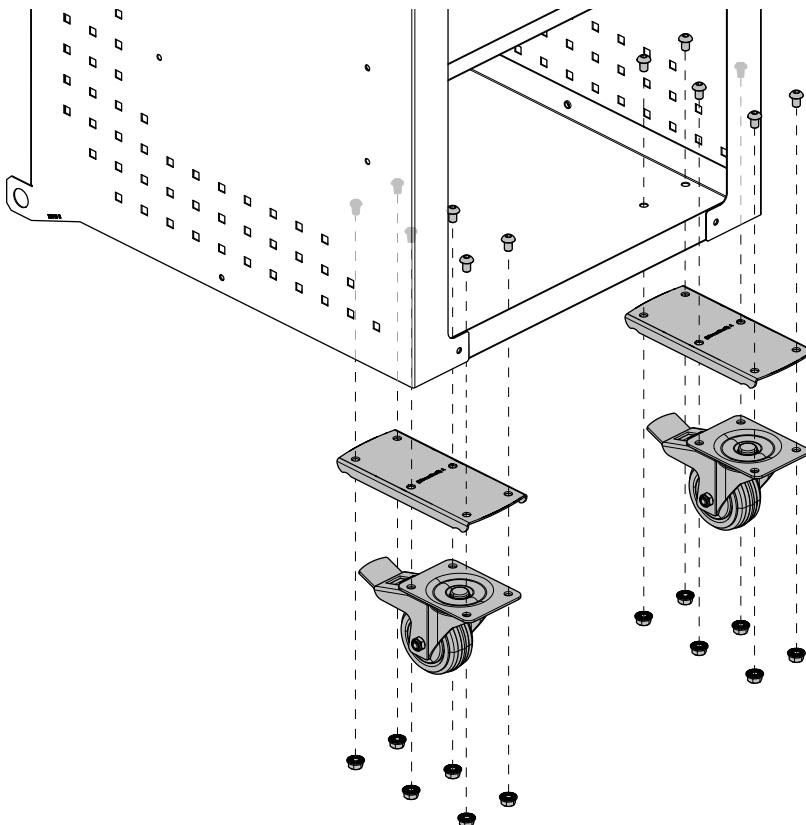


DENT 1600 WD


3 | 2 G + 2 H

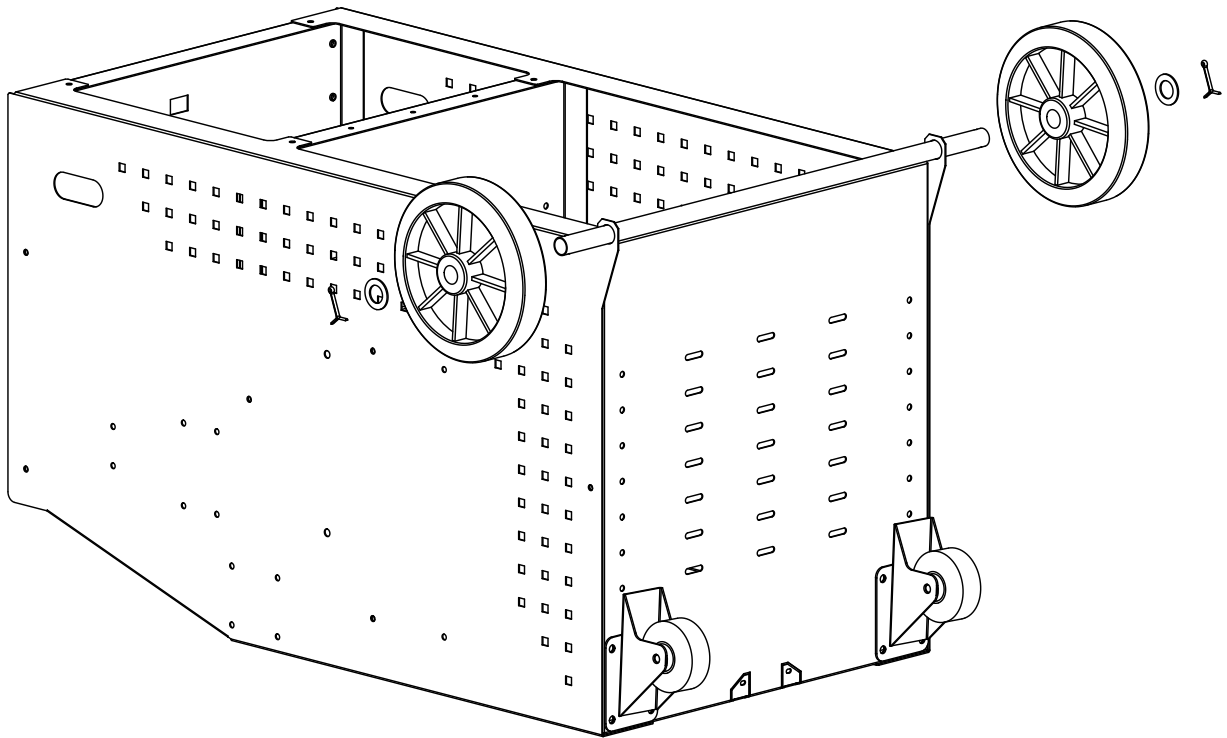


4 | 4 A

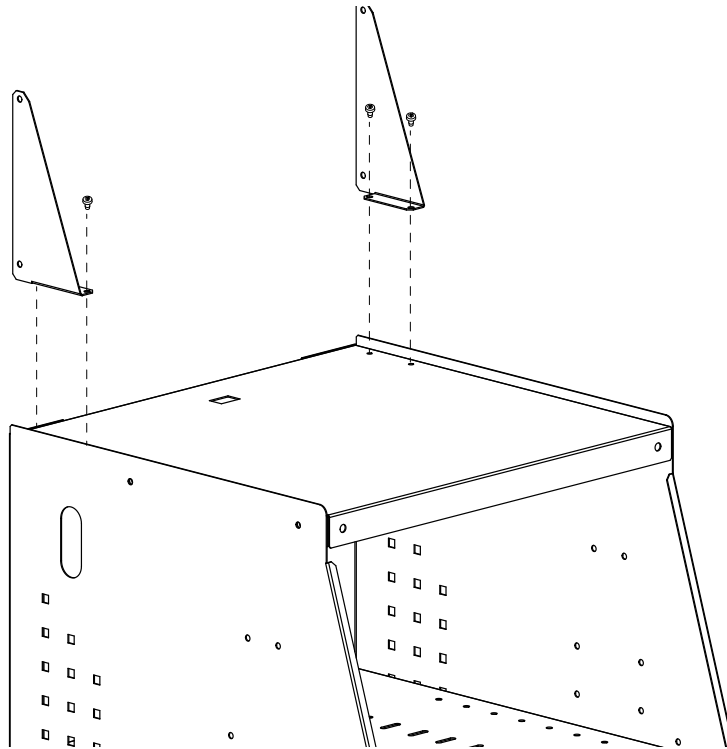


5 | 4 A

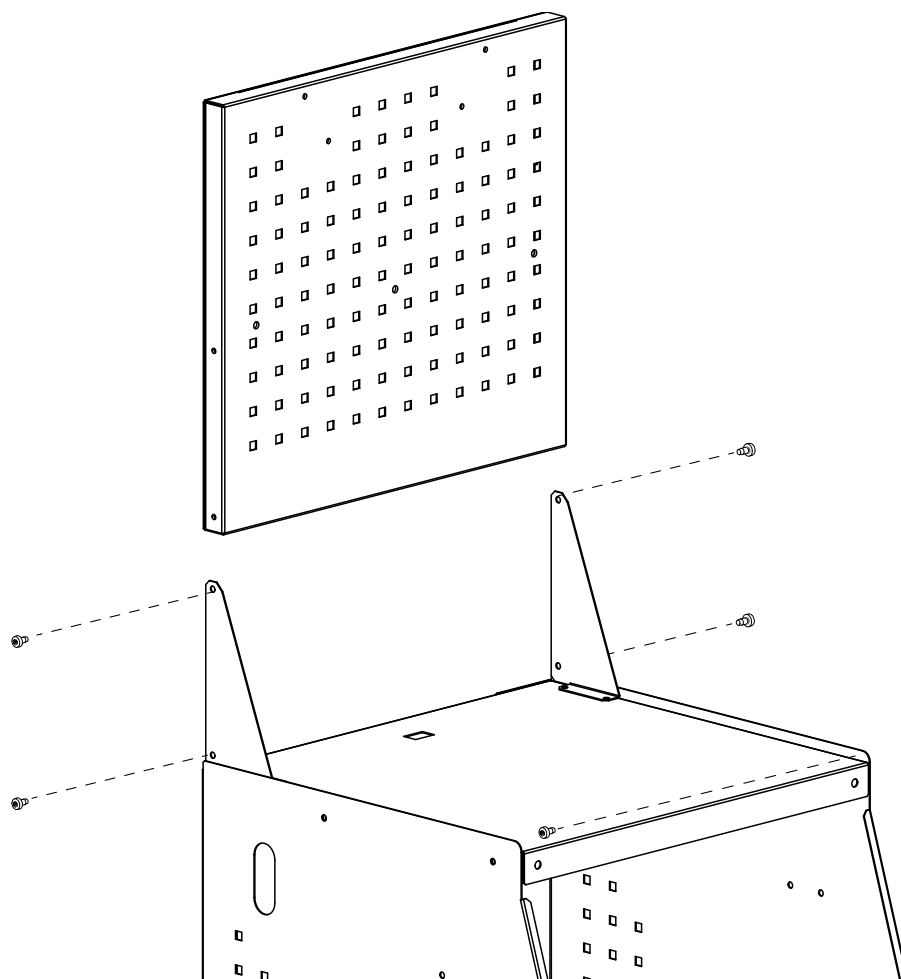


6 | 8 A

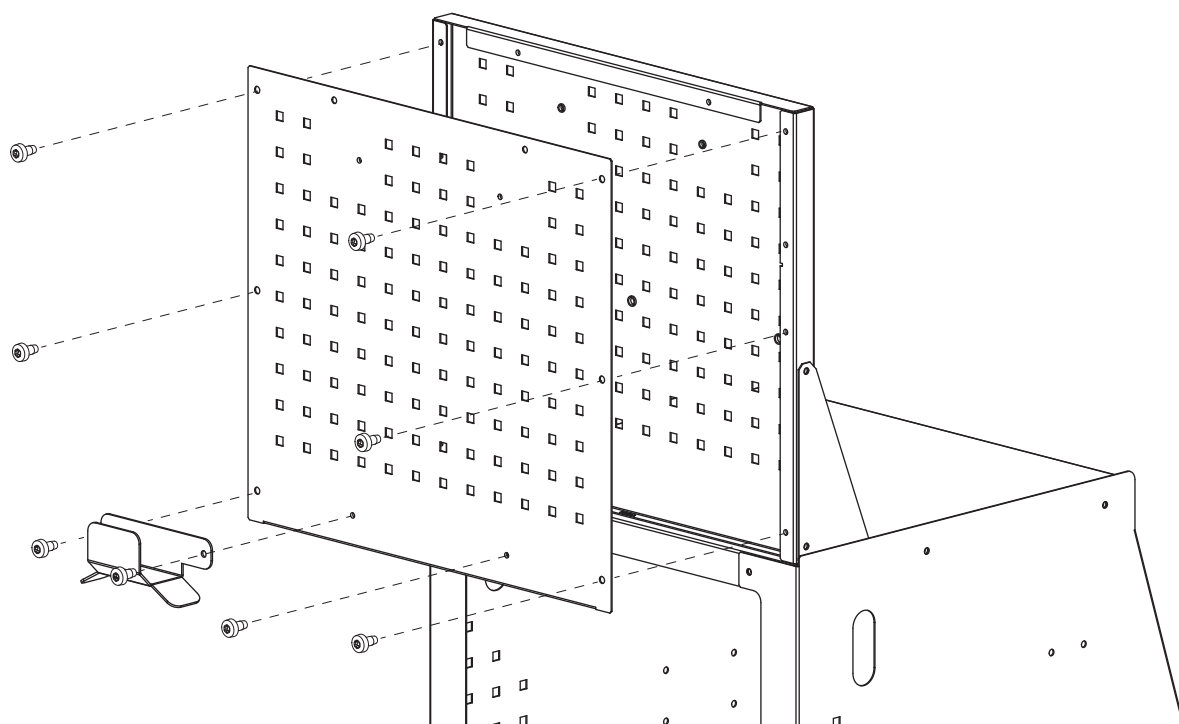


7 | 2 D + 2 F

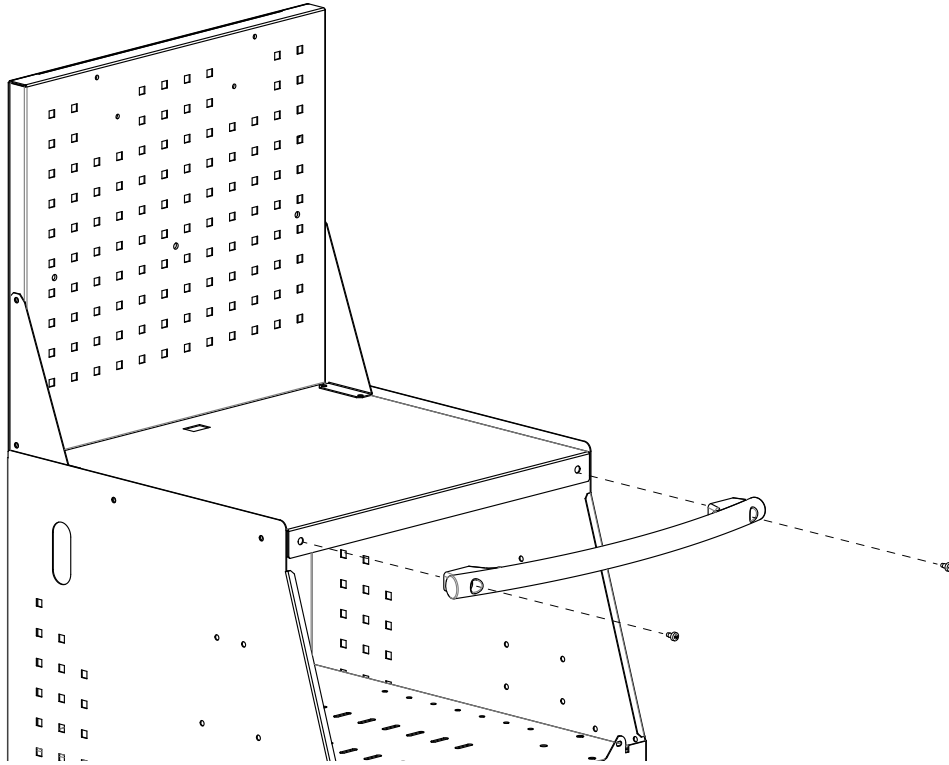


8 | 8 A

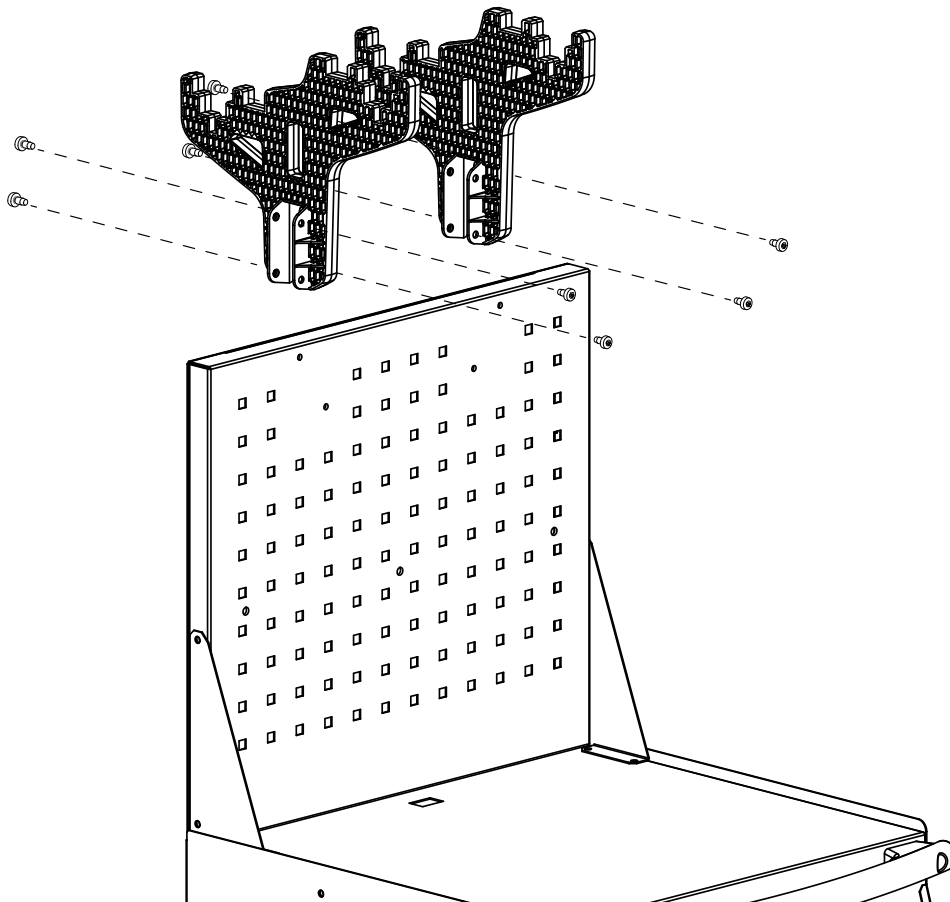


9 |

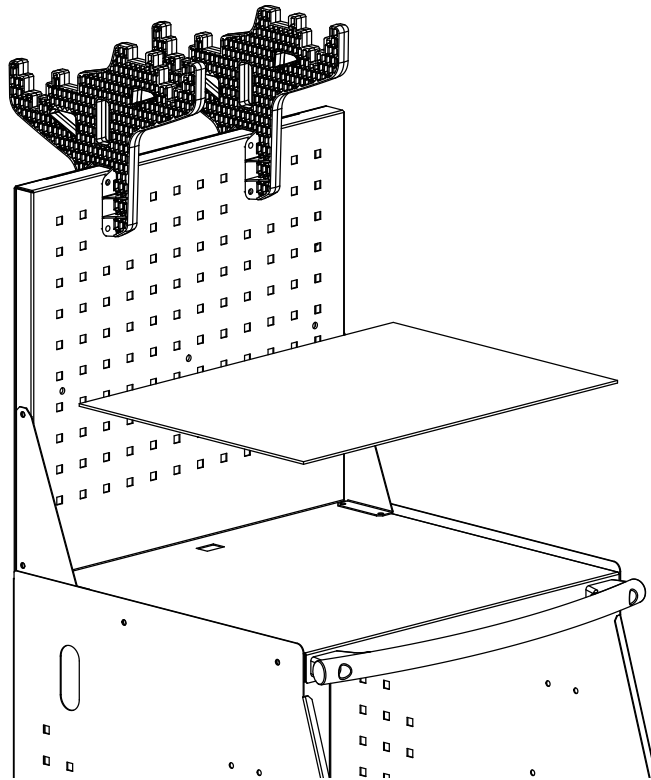


10 | 10 B + 10 E / 1 I

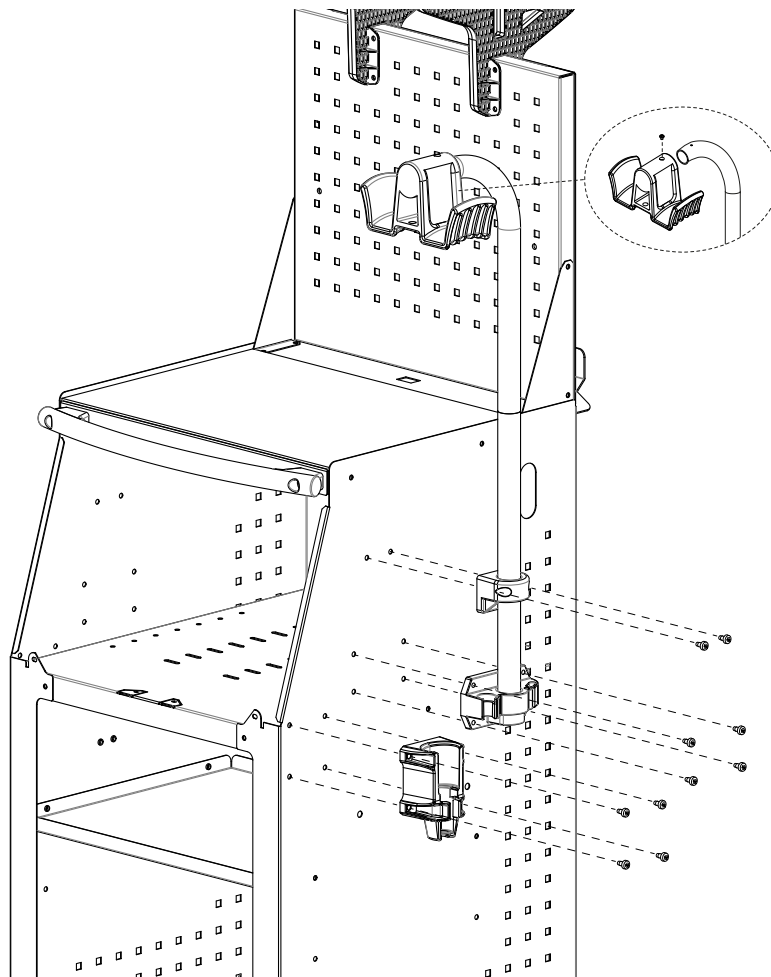


11 | 4 A + 4 B + 4 E

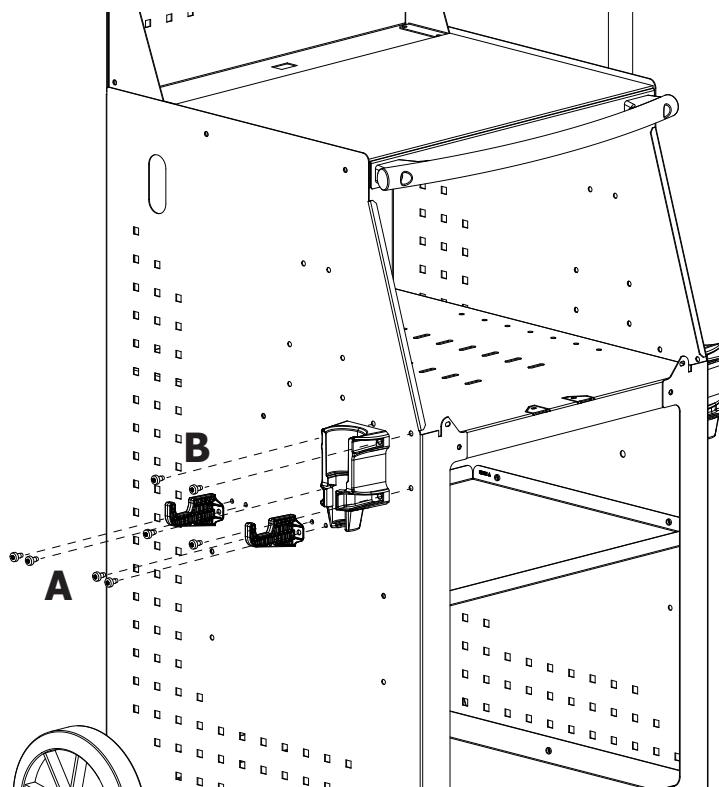


12 |

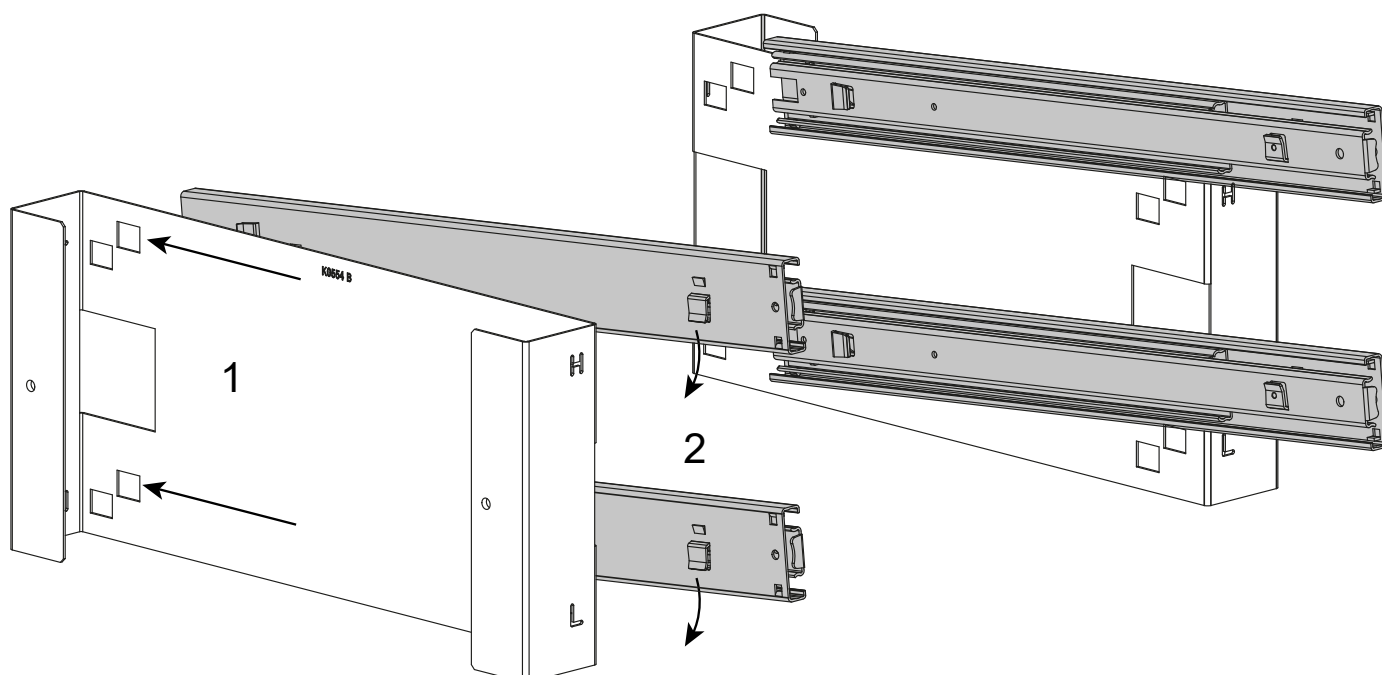

DENT 1600 WD

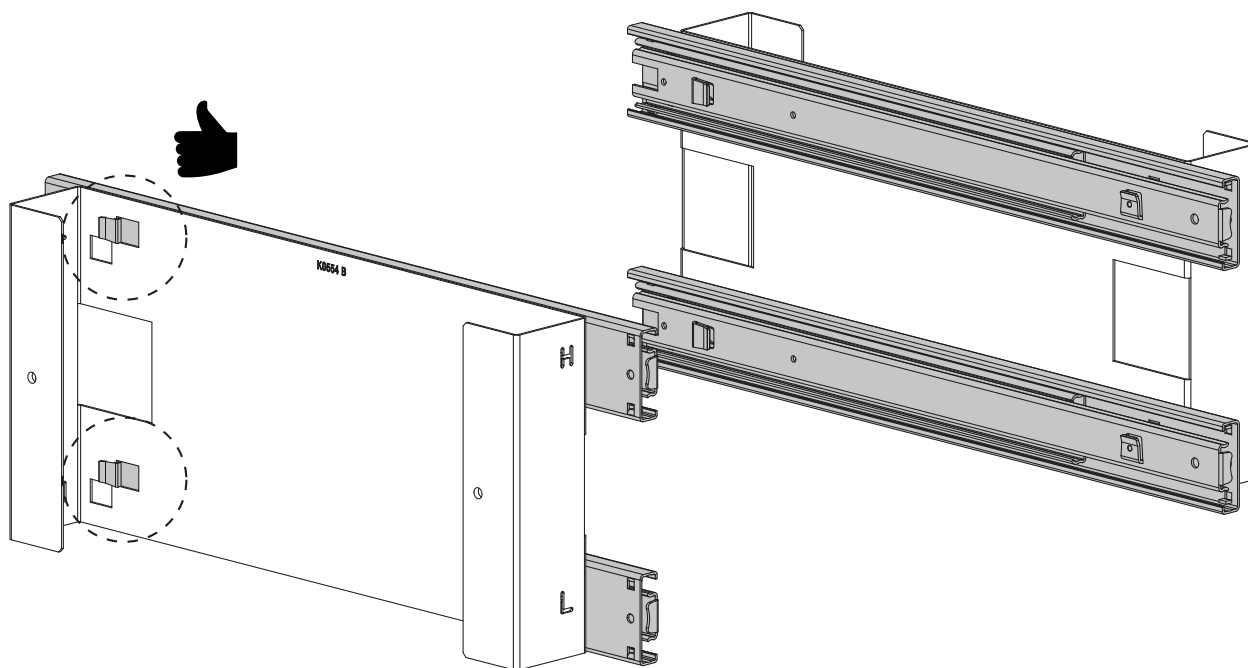


13 | 4 A

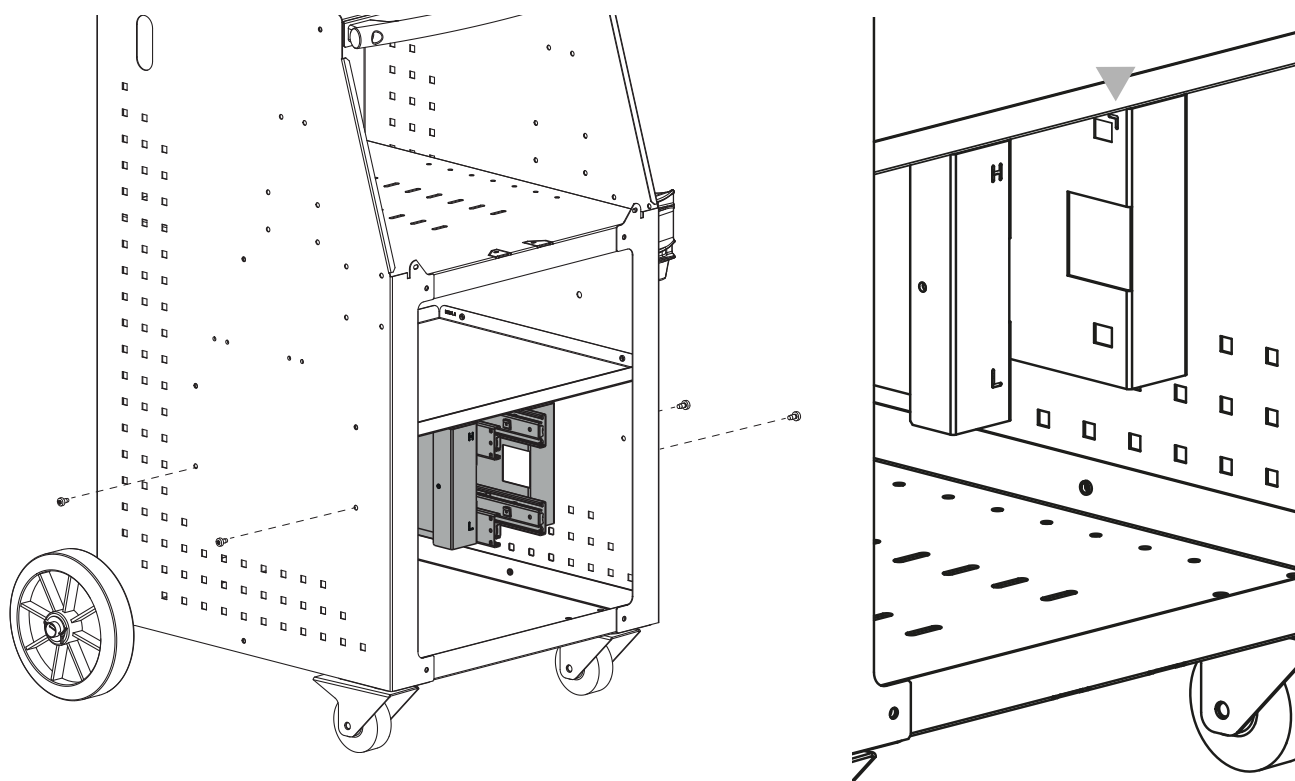


DENT 1600 WD


14 | 4 K + 4L

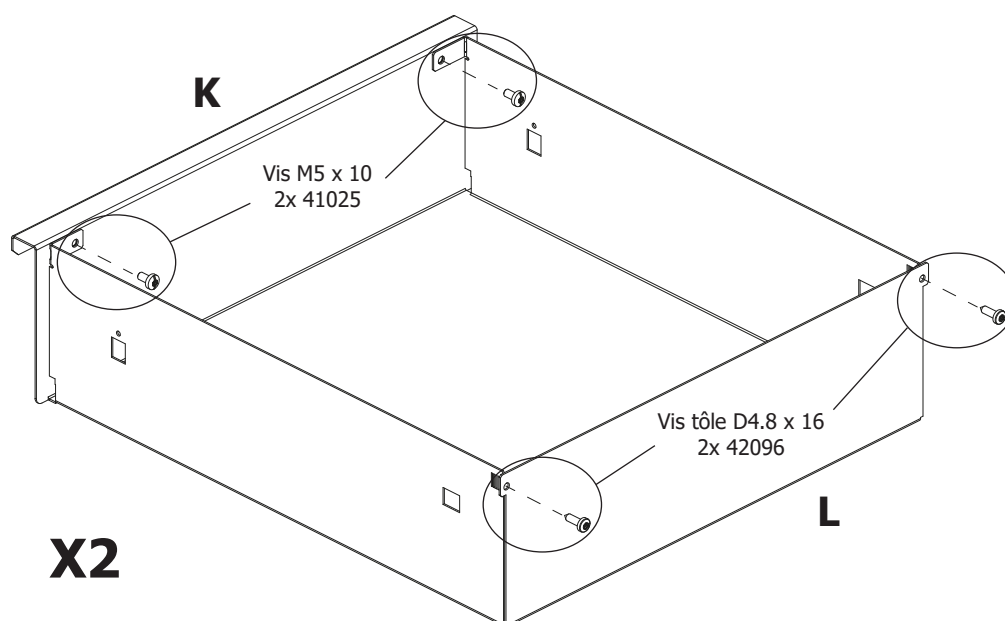


15 |

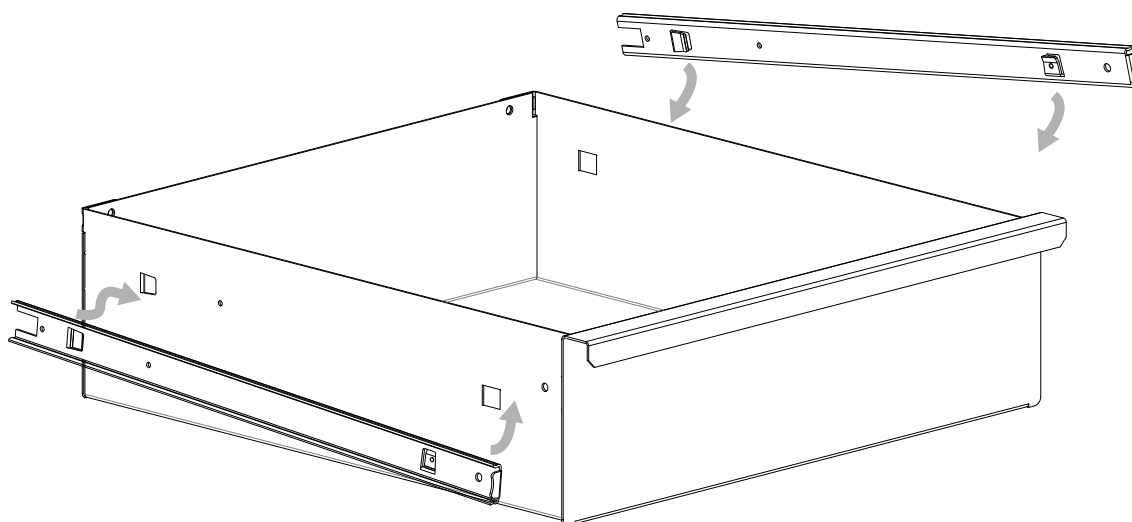


16 |

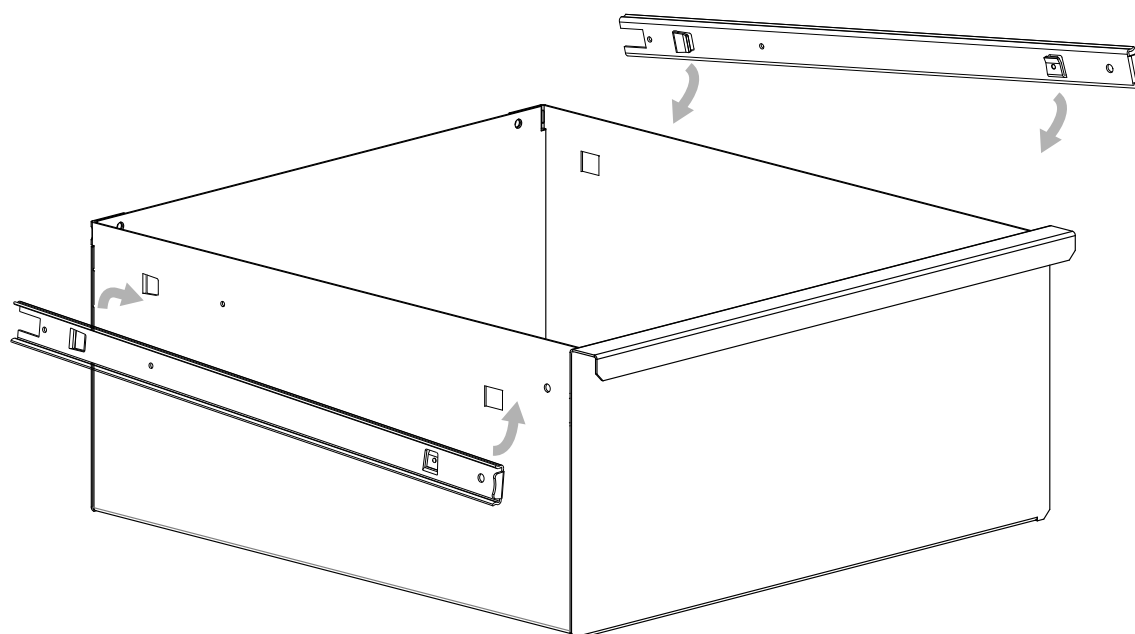



17 |

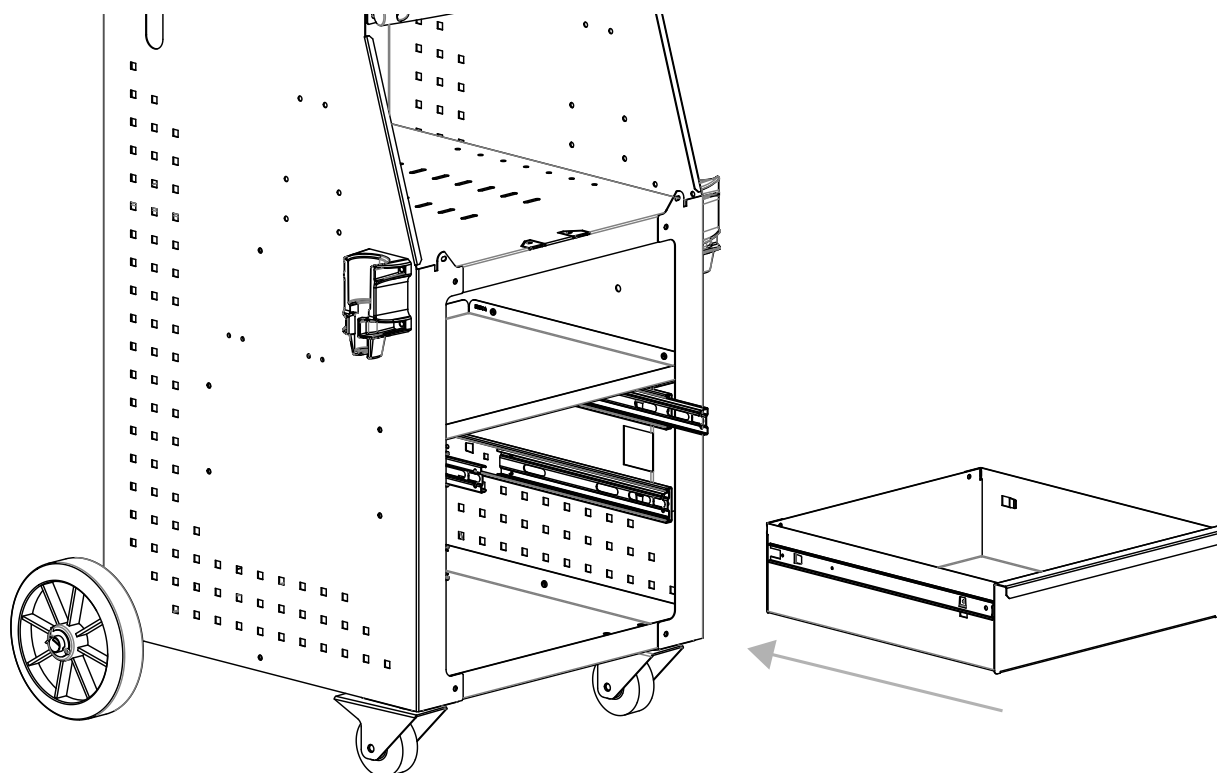


18 |

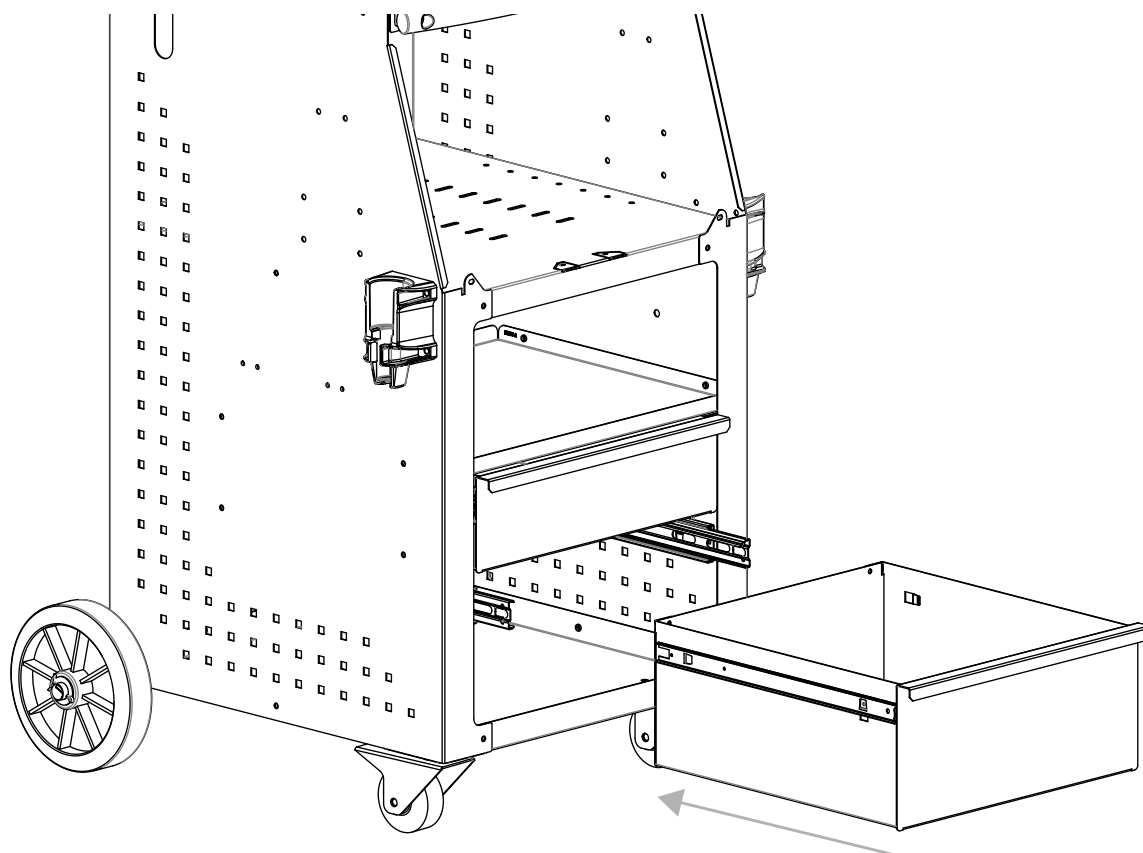


19 |  x1 - 2 J

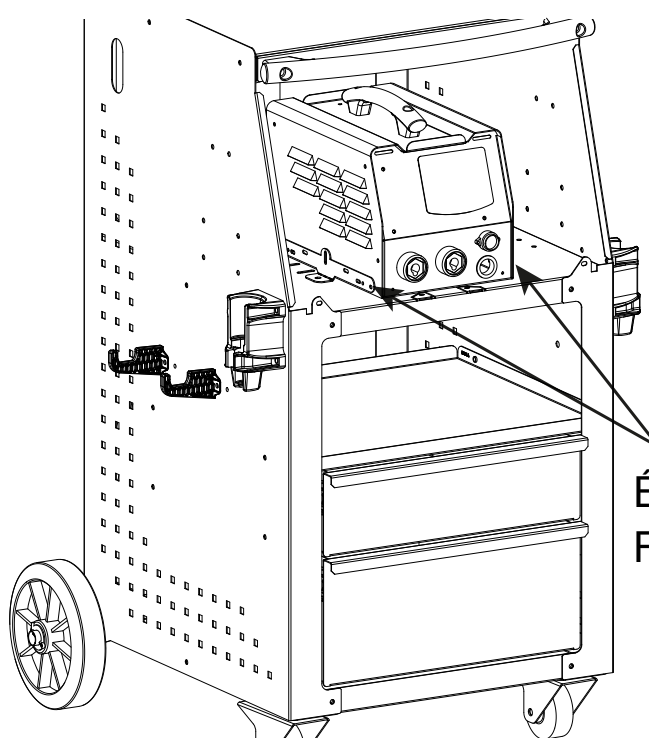


Équerres de fixation
Fixing brackets

20 |  x2

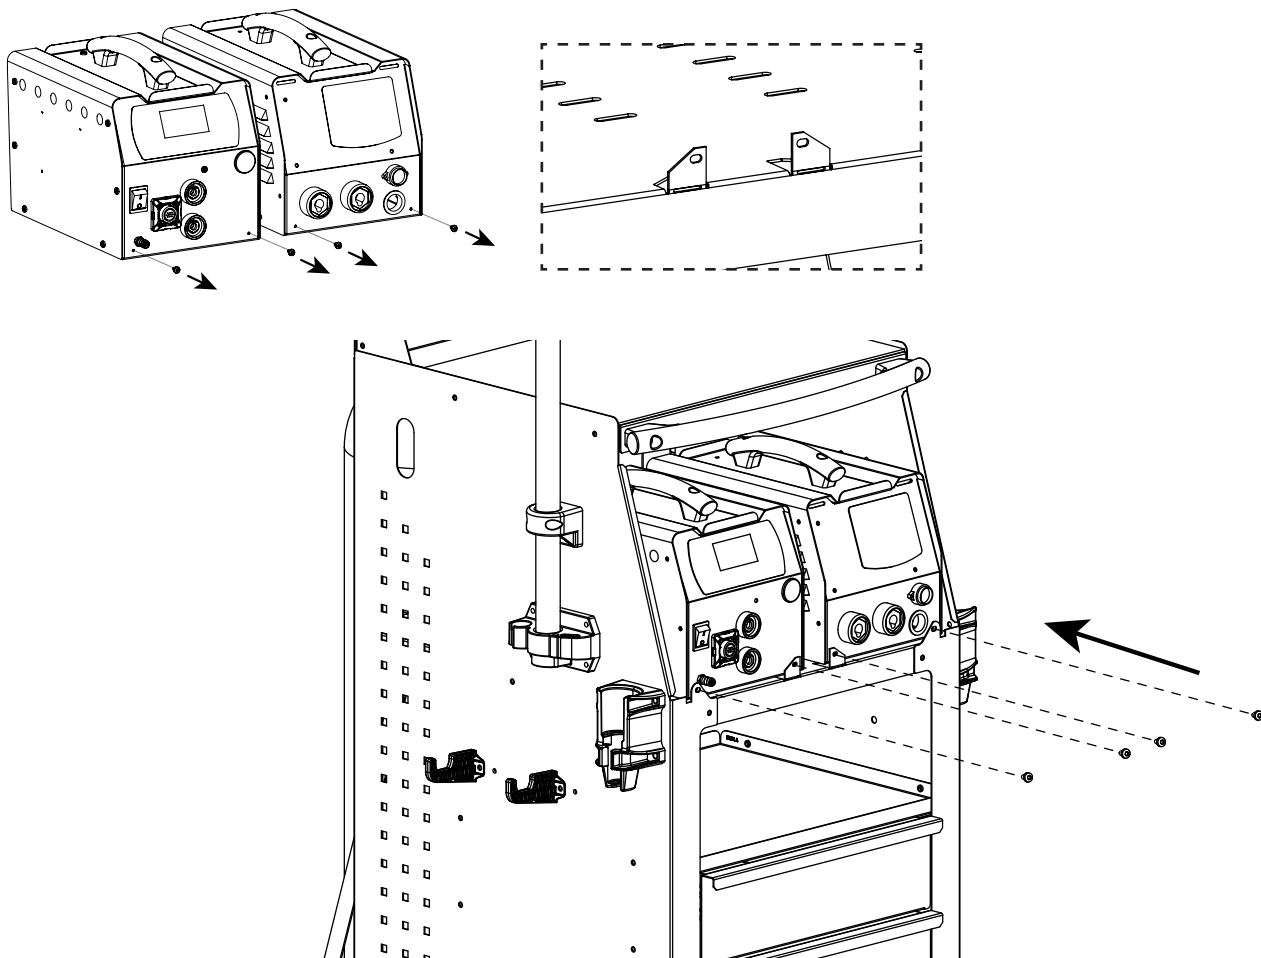

Pour retirer un tiroir suivre les étapes ci-dessous.
To remove a drawer follow the steps below.
Um eine Schublade herauszunehmen, befolgen Sie die folgenden Schritte.

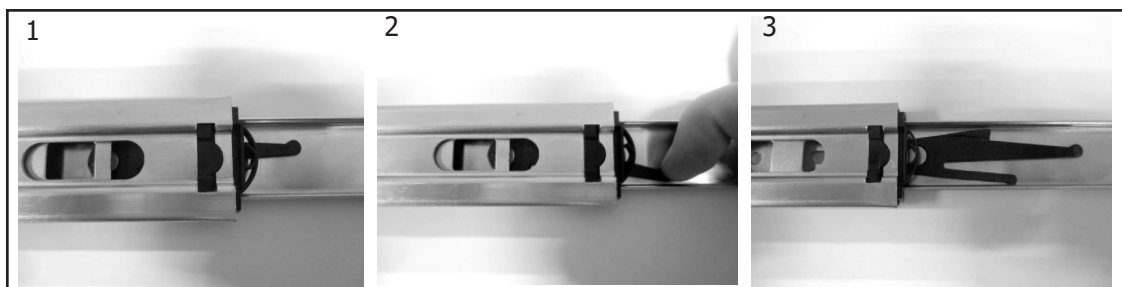

SAS GYS
1, rue de la Croix des Landes
CS 54159
53941 SAINT-BERTHEVIN Cedex
France